




# MOUNTY MODELS

## TRACK ROLLER FRAME COVERS STALINETZ AND SIXTY


### DETAIL SET FOR THUNDER MODELS 35006 AND 35400

MM035001\_14

NO. 14R (OUTSIDE)




NO. 14L (OUTSIDE)




REMOVE THE RED AREA

NO. 15R (INSIDE)




NO. 15L (INSIDE)




#### STEP 0.




#### STEP 1.

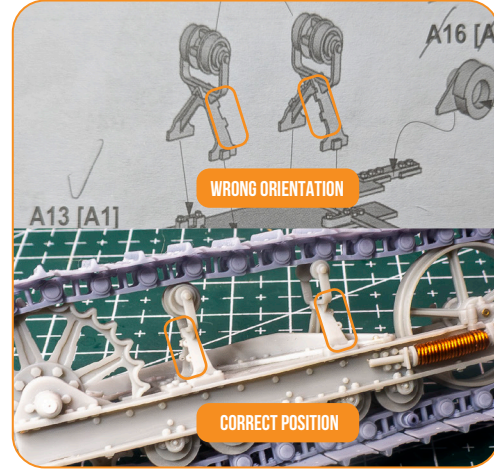

#### STEP 2.

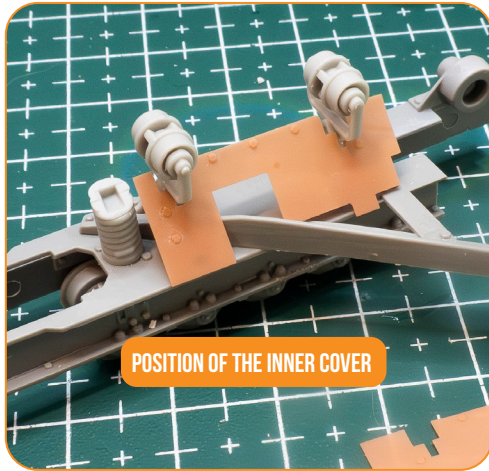

#### STEP 3.

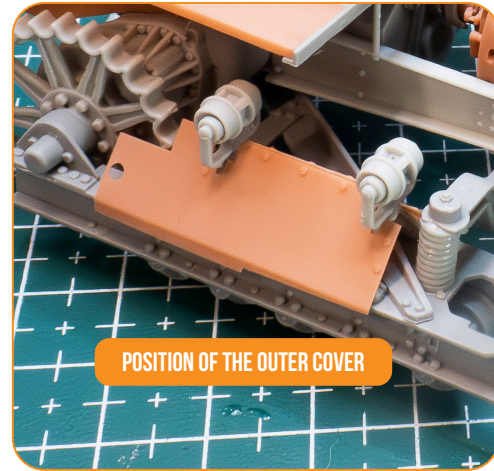

Info: [info@moutymodels.eu](mailto:info@moutymodels.eu)